

Epic 777

Owner's manual

Contents

Product overview	5
Storage	6
Setup and adjustments	8
After paddling	11
Transportation	12
Warning	14
Paddler safety	15
Contact details	16

 
 
Product care guide

Congratulations on the purchase of your Epic V7!


This unique surfski is constructed of durable, rotomolded Polyethylene with a foam laminate to create a stiff, light and rugged kayak. With proper care, the hull will maintain its shape for many years of enjoyable use. For your convenience, we have put together the following care tips. If you have any further questions, feel free to contact us.

Product overview


- 1. Smart Track Kick Up rudder (optional)
- 2. Ergonomic Handle
- 3. Standard Surfski Rudder
- 4. Rudder Hatch
- 5. Storage Compartment Hatch
- 6. On Deck Storage with bungee cord fastening
- 7. Side Handles
- 8. Water Bottle holder
- 9. Leg Leash attachment point
- 10. Bailer
- 11. Foot brace with steering pedals
- 12. Rudder line adjuster
- 13. Forward cockpit storage with bungee cord fastening
- 14. Breathable drain plug
- 15. Rudder line
- 16. Spreader bar for steering control
- 17. Rudder line feeder

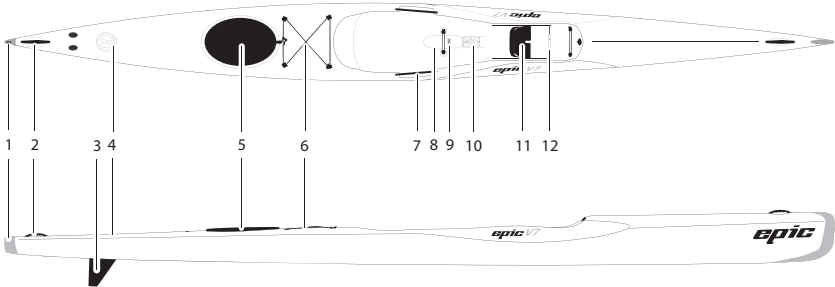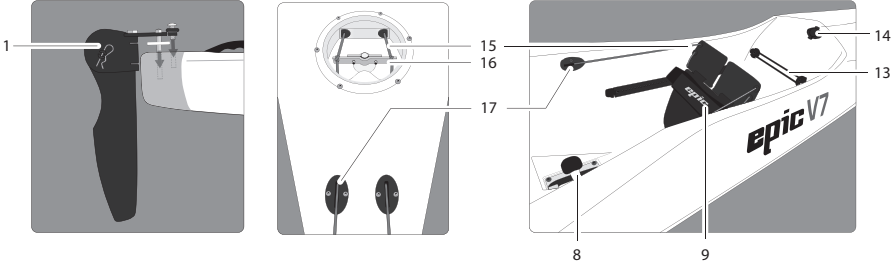


Storage

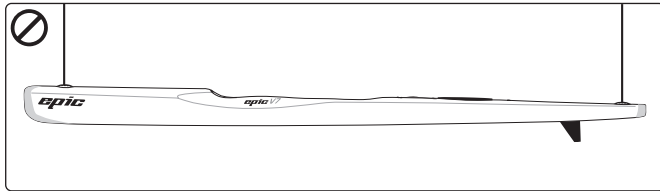 


Do NOT store V7 hanging on its handles.

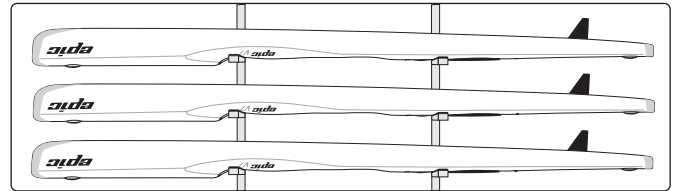 

 Store your Epic V7 fleet on a separate padded rack for each surfski. Stacking the surfskis on top of each other may deform their shapes.

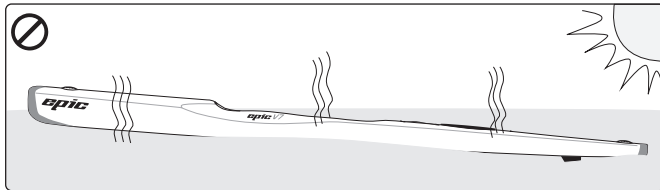

 Do NOT leave your Epic V7 under direct sunlight for prolonged periods of time.

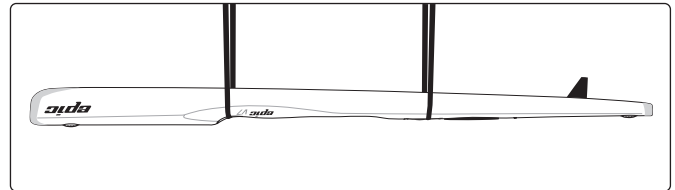

Use 5 cm (2 inches) wide straps to hang your Epic V7 surfski. Place the straps at approximately 1/3 boat length from each side.

 
Storing the new Epic V7 correctly is the first step to make sure your Surfski is well maintained and always in a good shape when you decide you want to enjoy some time on water. Your storage space may be slightly different to someone else but you should aim to adapt it according to the following basic principles:

- Never hang the V7 from the bow and stern handles. The sturdy handles are designed for carrying the kayak, but not for hanging the boat for extended periods.
- When storing your V7, it is best to support it with padded bars or racks, resting upside down. The V7 can also be stored on its side resting on a padded surface.
- If you choose to hang your V7 from a ceiling, use straps rather than rope to spread the load over a greater area, and hang it upside down with the straps approximately 1/3 distance from each end.
- Prolonged sun exposure can shorten the life of any Polyethylene kayak. The V7 material utilizes ultraviolet stabilizers, but for the longest life, we recommend you keep the kayak inside or in the shade when not in use.
- If stored outside, check your V7 occasionally to assure the aft hatch is dry and free of dirt and mold.
- Always remember to tie your kayak down securely so that it does not get knocked off of the rack.




Setup and adjustments

Ready to go for a paddle? Take a little time to inspect and setup your Surfski before you take a trip to the selected paddling site. It is much easier to deal with unexpected issues in the comfort of your home rather than on the beach or even worse in the water. Follow these steps before you go:


- Inspect the entire length of your Surfski for damage or unusual deformation. Start from one end and work your way to the other one. Inspect the hull, deck, steering mechanism, rudder lines, bailer. All moving parts should work smoothly and be easy to operate and the rudder line should not have any chafing or damage. If you discover any damaged parts, replace the part before you go on water.
- To install the hatch cover correctly, see images included with this Care Guide, and view online videos on Epickayaks.com. Test the installation by trying to remove the cover without loosening the fastener. When pressing down on the center of the cover, it should not come off! Inspect the hatch cover before launching to be sure it is properly attached and tightened.

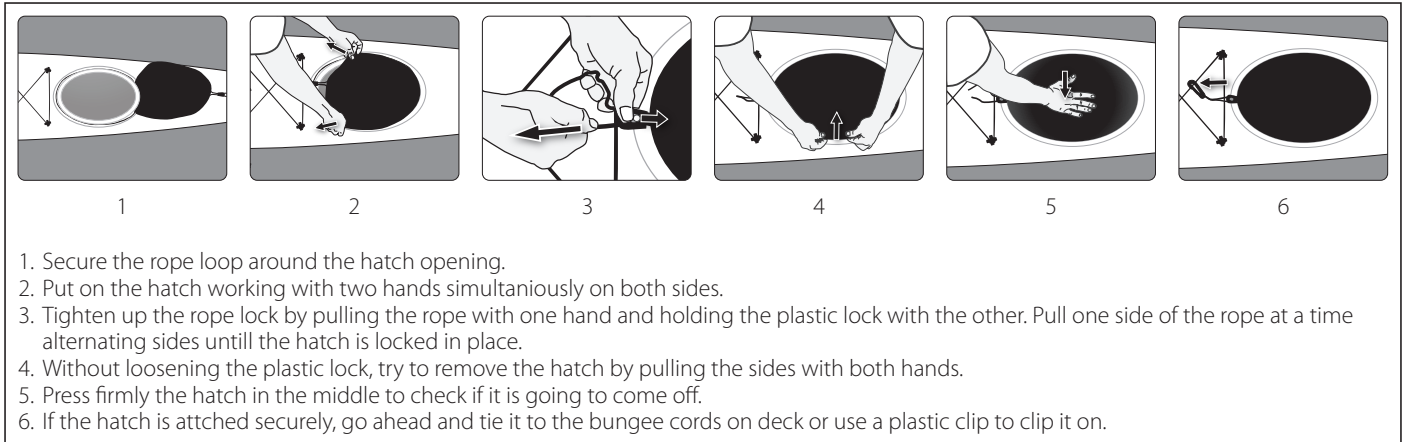

- Properly tightened, the hatch cover is seaworthy and reliable. The cover must be secured to the rear deck lines so that it will not be lost. Should the cover come off during open water paddling, the V7 rear hatch is exposed to swamping! Stop and reattach the cover immediately. Consider the use of a stern flotation bag in the rear hatch for added safety if attempting open water voyages in the V7.
- Inspect the rudder lines and steering mechanism for wear and tear. Replace the rudder lines if you identify chaffing. Epic uses static Spectra cord for rudder lines. Contact your nearest Epic dealer or Epic Kayaks for replacement line.
- Attach a leg leash to the leash anchor point (Leg leash has to be purchased separately)

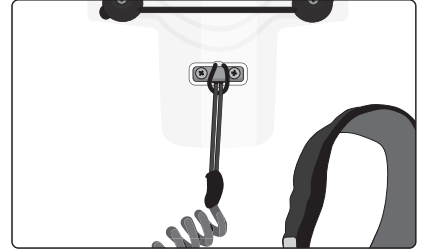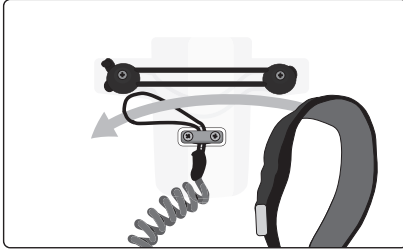  
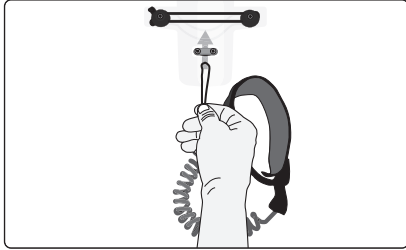 


- Adjust the length of the foot brace

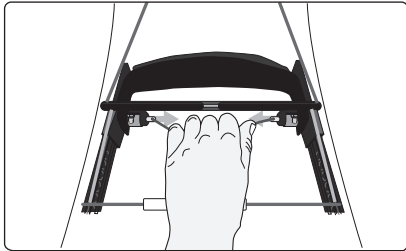 

Pull the line behind the foot rest to release lock pins from the rail.

  
Adjust the length for proper fit by sliding the foot rest forward or back.

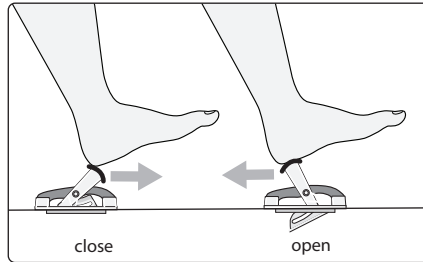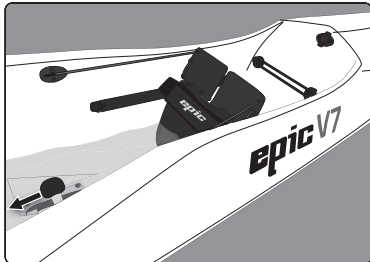

Open the bailer to drain any water out of the cockpit. Use your hand or one of your heels to push the lever back toward your body to "open" position. NOTE: Water will drain out only while the V7 is moving forward. If you are not moving or if you are moving in reverse, the water will go inside the cockpit.

After paddling

 - A quick rinse with fresh water is recommended after every paddle to protect from salt and silt. They will not harm the hull and deck, but can keep moving parts from operating smoothly over time. Always rinse the moving parts (foot pedals, rudder, etc) and the aft hatch to keep it clean.

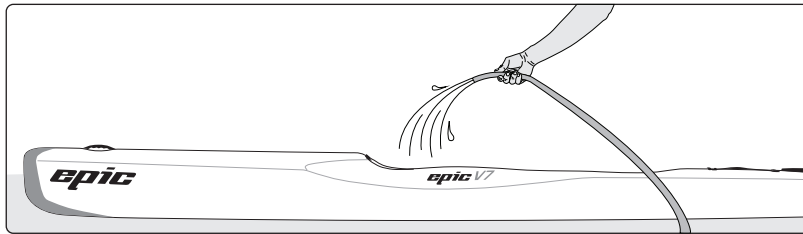


Rinse your Epic V7 surfski with fresh water after each use.


- Avoid storing for long periods with any water inside the hull. Always drain any water, and if needed use a sponge to dry the aft hatch. Before replacing hatch cover, dry the hatch properly.

Transportation

 - Always use padded crossbars, and transport your V7 upside down to protect the integrity of the hull.

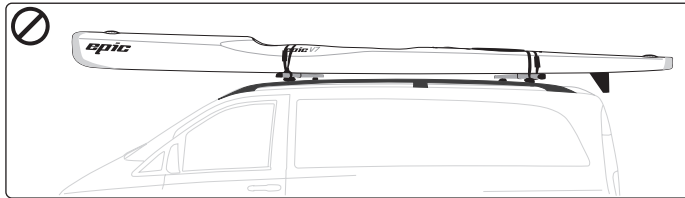


 Do NOT transport nor store your Epic V7 in upright position on hard surfaces.

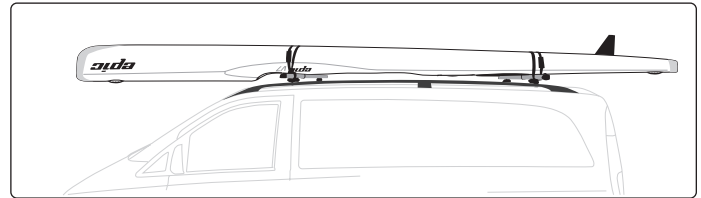

Transport your Epic V7 upside down on flat bar padded roof racks.

 - Vertical bars called “stackers” or “J-cradles” allow a kayak to be carried on its side, and the V7 can be transported this way with appropriate padding. Only transport the boat right side up if you have padded cradles that conform to the hull shape.

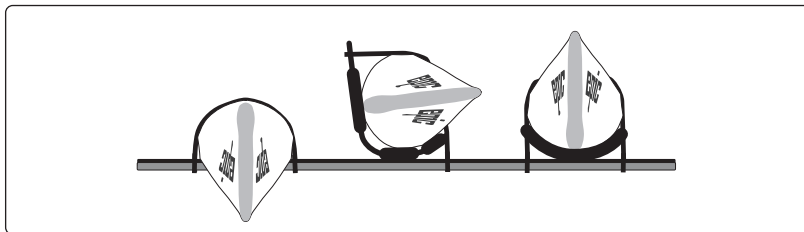

Correct way of transporting Epic V7 on a padded roof rack with or without supporting cradles.

- Be cautious of using ratcheting straps, as they are easy to over tighten. Over tightening or strapping directly to an unpadded rack can damage the kayak. If a dent occurs from improper storage or transport, contact Epic Kayaks for tips on removing the dent. (Placing the V7 in direct sun will often return it to its original shape.)
- The V7 can be secured to the rack with a lock and cable run through either the side handles or end handles.
- The failure of a single tie-down could cause the kayak to come loose; please consider using bow and stern lines attached to the front and rear of your vehicle for added security.

Warning

- The durability of a Polyethylene kayak allows it to be paddled in areas where composites boats cannot. Repeated abrasions and impacts can cause material fatigue. In very low temperatures, resistance to impact may be reduced. Dragging the boat to and from the water, beach launching or “seal launching” off rocks will abrade the hull, ultimately shortening your kayak’s life and performance.
- PLEASE REMEMBER THAT DAMAGE TO YOUR CRAFT THROUGH WEAR AND TEAR IS NOT COVERED UNDER WARRANTY.

Paddler safety

- Always use a leash tethered to the anchor point in the V7 cockpit. Use a leg leash for open water paddling. Remove the leash when entering or exiting the surf zone. A paddle leash is best for surf zone use. Epic leashes are available from authorized Epic dealers, or online at Epickayaks.com.
- Know how to remount the V7 in the conditions that you intend to paddle in! Practice the surfski remount technique regularly, and be sure you can do it quickly, and confidently. Refer to online videos demonstrating the remount on Epickayaks.com. Always wear an approved Personal Flotation Device, and appropriate insulating layers for the water temperature. Carry an emergency communication device such as a cell phone in a waterproof pouch, or a handheld marine radio. Never paddle alone!

Contact details

epickayaks.com

645 Marina Drive, Charleston, SC 29492 USA

info@epickayaks.com, +1 843 884 4601

EPIC KAYAKS AUSTRALIA

PO Box 4233

Balgowlah Heights,

New South Wales 2093

PH: +612 9949 9944

Email: sales@epickayaks.net.au

URL: www.epickayaks.net.au

GUTO CAMPOS

Rio Grande Do Sul

Rio Grande Do Sul

PH: +55 (051) 8150 8595

Email: guto@epickayaks.com.br

URL: www.epickayaks.com.br

EPIC KAYAKS EUROPE

Soltauer Str. 26-30

Berlin, 13509

PH: 0049 30 202 619 61

Email: tedy@epickayaks.com

URL: www.epickayaks.com

EPIC KAYAKS SOUTH AFRICA

Point Waterfront

Durban, 4001

PH: +27 (0)81 240 6108

Email: andrew@epickayaks.co.za

URL: www.epickayaks.co.za

CAPTAIN JACK LTD

Tidhar st. 22

Pardes Hana, 37000

PH: 972 4 6373273

Email: captainjack@bezeqint.net

URL: www.captainjack.co.il

ADVENTURE HQ

6A Street

Dubai

PH: +971 4 346 6824

Email: info@adventurehq.ae

URL: www.adventurehq.ae